

LCD Display Manual



Product: TFT LCD Display

APT Model: 600C-BLE

Supplier: BuyTricycle
Poorhole Ln,
Broadstairs,
Kent,
CT10 2PT
TEL: +44 7856 715212

Email help@buytricycle.com

Content

1	Product model.....	3
2	Suppliers.....	3
3	Specifications.....	3
4	Dimensions and Material.....	3
5	Features.....	4
6	Main page.....	4
7	Functional Description.....	6
7.1	Power On/Off.....	6
7.2	Assist levels.....	6
7.3	Screen Switching.....	7
7.4	Headlight / Display Mode.....	7
7.5	Walking mode (6km).....	7
7.6	Bluetooth.....	8
7.7	Data cleanup.....	10
8	Menu Page.....	10
8.1	Display settings.....	11
8.1.1	Language.....	11
8.1.2	System.....	11
8.1.3	Brightness.....	11
8.1.4	Auto off.....	12
8.1.5	Scenes.....	12
8.1.6	Clock.....	13
8.1.7	Focus.....	13
8.2	E-bike Settings.....	14
8.2.1	Start password.....	14
8.2.2	Assist levels.....	15
8.2.3	Wheelsize.....	15
8.2.4	Battery voltage.....	15
8.2.5	Battery Indexes.....	16
8.2.6	Pow Indexes.....	16
8.2.7	Pow range.....	17
8.3	Advanced setting.....	17
8.3.1	Speed Limit.....	18
8.3.2	Current Limit.....	18
8.3.3	Poles In motor.....	18
8.3.4	Start after poles.....	18
8.3.5	Drive mode.....	19
8.3.6	Assist poles.....	19
8.3.7	Start strength.....	19
8.3.8	Error code.....	20
8.4	Factory Setting.....	20
8.5	Information.....	20
8.5.1	Product Infor.....	21

8.5.2	Battery Infor	21
9	Errors code	21
10	Assembly instructions	22
11	Install and use precautions	22
12	Copyright Notice	23

1 Product model

Model: 600C-BLE

2 Suppliers


BuyTricycle

3 Specifications

- 2.4inch TFT screen(IPS 240*320 pixel)
- Battery supply:24V/36V/48V/52V
- Multi-language support(6 languages)
- Maximum output current to controller: 200mA, off-leakage current <math>< 5\mu\text{A}</math>
- Operating temperature: $-15\sim 40^{\circ}\text{C}$, Storage temperature $-20\sim 50^{\circ}\text{C}$
- IP65
- EN 15194:2017
- RoHS

4 Dimensions and Material


Shell and bracket is made with ABS+PC, panel is high hardness acrylic.

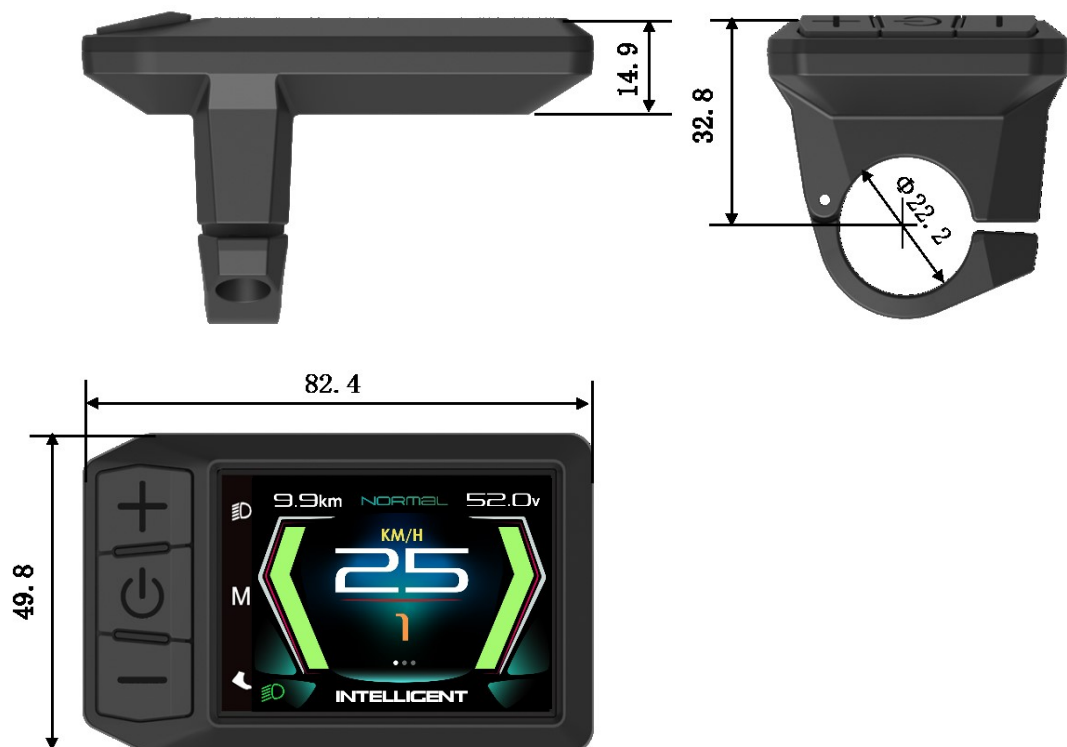


5 Features

- **2.4inch TFT screen.**
- Ergonomic external button design, easy to operate, vibration function is provided during button operation.
- **6 languages:**
Czech, German, French, English, Italian, Spanish are supported.
- **Speed indicator:** Speed (Real-time), AVG Speed, MAX Speed.
- **Metric / Imperial.**
- **Smart battery indicator:** Capacity (percentage) or Voltage.
- **Mileage / Riding time indicator:** TRIPA&TIMEA (Data reset after shutdown), TRIPB&TIMEB(Data is saved after shutdown), Odometer, Range(If Controller and Battery support).
- **Clock indicator:** Built in battery, clock keeps running when power off.
- **Brightness setting:** Day and Night Brightness can be set independent.
- **Assist level:** 4 modes optional (3/5/9/U).
- **Errors Code tips.**
- **6km walking.**


6 Main page

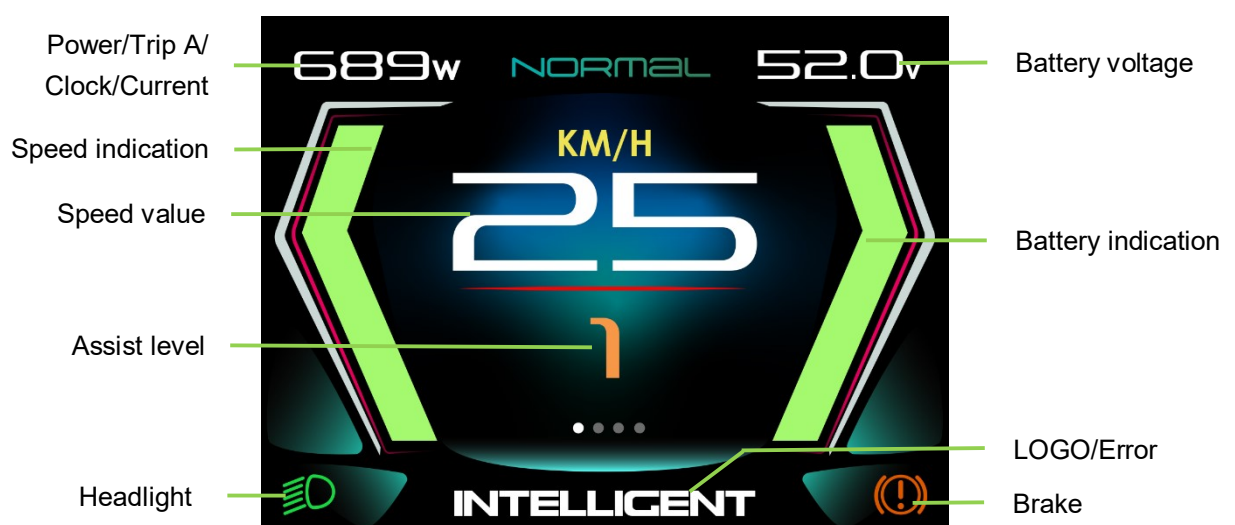

Modern mode

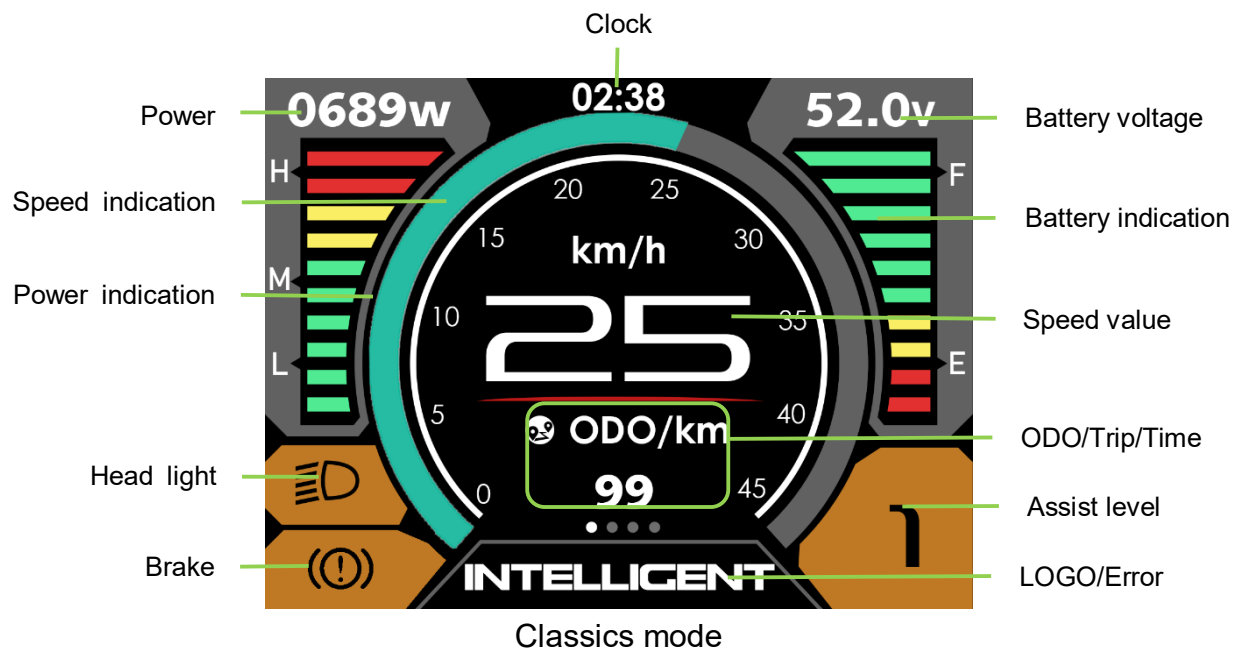

Classics mode

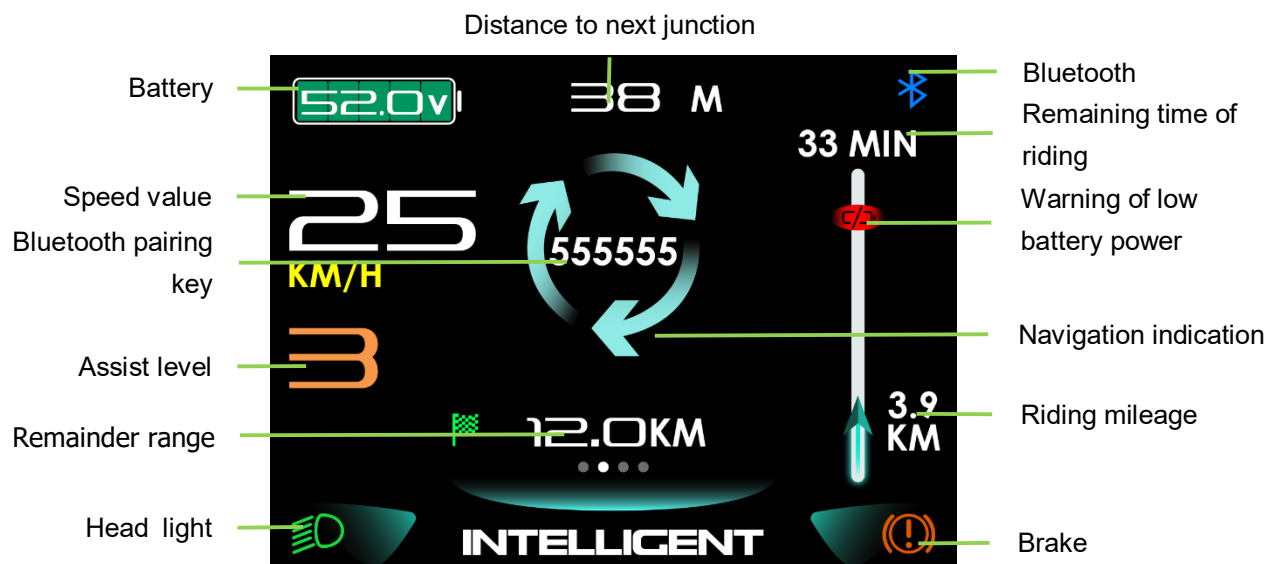



Bluetooth page

- **Clock:** 12h or 24h.
- **Bluetooth:** Show the Bluetooth connection status.
- **Head Light:** Head Light on/ off.
- **Mileage mode/Riding time:**

Modern page: TRIPA (Data reset after shutdown)

Classics page: TRIPA (Data reset after shutdown), TRIPB (Data is saved after shutdown), Odometer, TIMEA (Data reset after shutdown), TIMEB (Data is saved after shutdown), Range(If Controller and Battery support).

- **Speed Value:** Real-time Speed, KM/H or MPH.

- **Speed indication:** When the speed limit is less than 40km/h, the maximum indicator is 45; when the speed limit is more than 40km/h, the maximum indicator is 90; if the real-time speed exceeds the maximum indicated, its display is not affected.
- **Smart battery Power indicator:** Provide a reliable battery Power indicator.
- **Assist level:** Displays the current assist level.
- **Brake:** Show  when checking error.
- **Error Code:** Show  when checking error.
- **LOGO.**

7 Functional Description



7.1 Power On/Off


Press **POWER** button for 2 seconds, you can turn on/off the display. The Display can automatically turn off when there is no operating and riding for 5 minutes. (The time can be set, refer to 8.1.4 'Auto off')

*Input pattern in first if pattern unlock was activated.

*Display will be locked for 30 seconds after 3 times failed attempt.

7.2 Assist levels

Press **UP/DOWN** button to change assist level. If the default setting is 5-gear: Top assist level is 5, 0 for neutral. Level quantities can be adjusted according to the customer requirements.

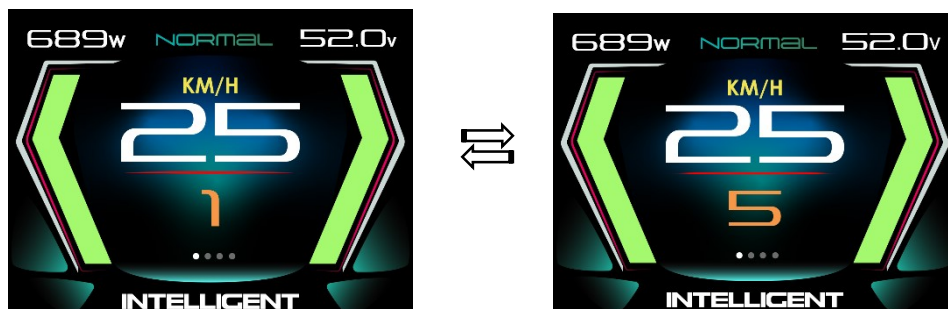


7.3 Screen Switching


Press **POWER** button to switch the screen, including Main Page, Bluetooth Page, Basic information Page and Information Page(The Main Page can be set, refer to 8.1.5 'Scenes').




Main Page –Modern/ Classics mode

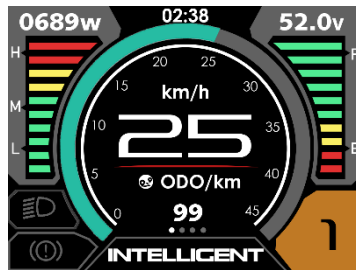

Bluetooth Page

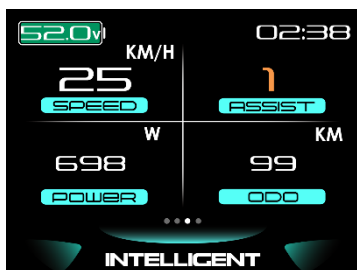

Basic information Page

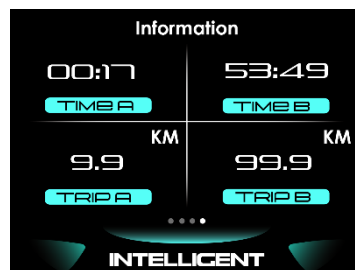


Information-1



Information-2

7.4 Headlight / Display Mode

Press and hold **UP** button for 2 seconds can turn on/off headlight, display will switch to the corresponding mode (Day or Night).

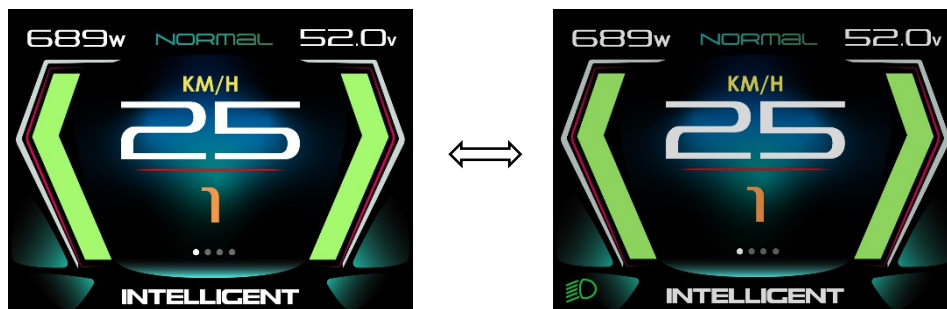

Day

Night

* The brightness of the Display can be set according to the user's needs, Refer 8.1.3 Brightness.

* The motor does not work when the battery voltage is low, Display still can keep the headlight on for a while when E-bike is in riding.

7.5 Walking mode (6km)

Press and hold **DOWN** button for 2 seconds can get into walking mode, show 'P' and real-time speed on the screen, out of walking mode when releasing the button.





Walking Mode


7.6 Bluetooth

Installing the “I-Bike” mobile app, turn on the Bluetooth of the mobile phone.


Open “I-Bike” app, click “Scan for device”, find “600C-BLE” and connect, input the 6-digit pairing key and click "pair".

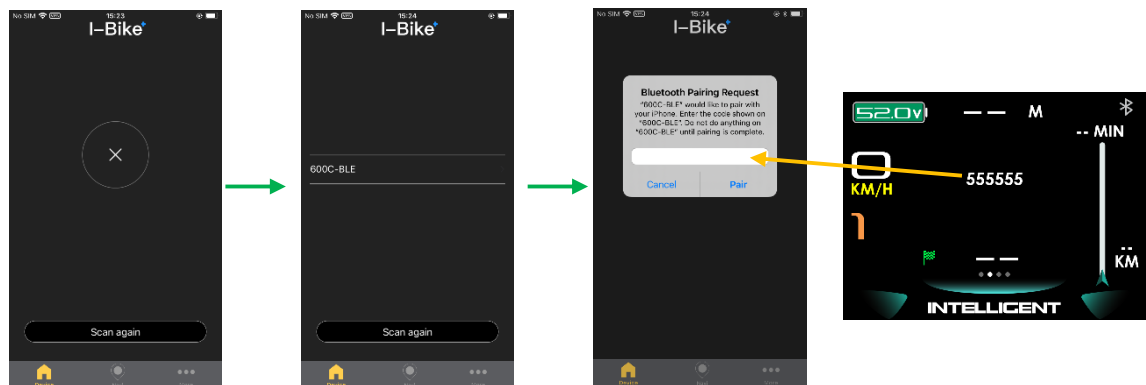

After the Bluetooth pairing is successful,  is displayed in blue, and the I-Bike APP will enter the main interface. When the mobile phone calls, receives messages, etc., the Display can show the reminder icon.

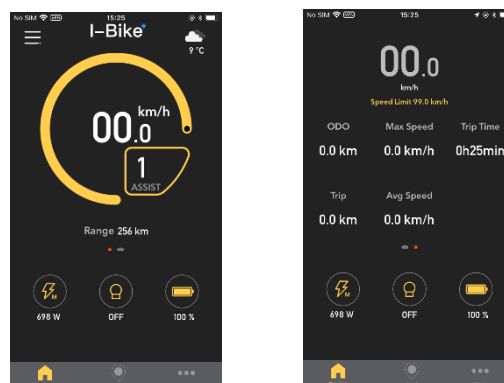

Main Interface

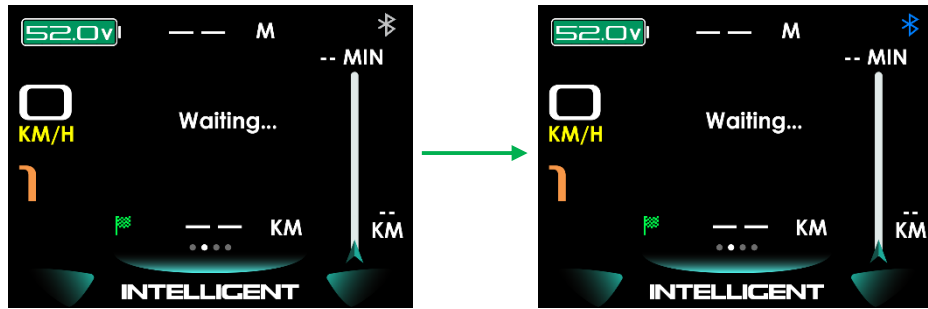

Interface before Bluetooth pairing

Interface after Bluetooth pairing


*Phone that has successfully connected to the Display's Bluetooth does not need to be paired again.

*Please note:

For some Android™ driven smartphones, there might occur eventual Bluetooth™ connection problems with the APT display due to software mismatches.

➤ **Settings**

Click the upper left corner of the "I-Bike" app to enter the Settings menu, including Display Settings, E-Bike Info and Battery Info.

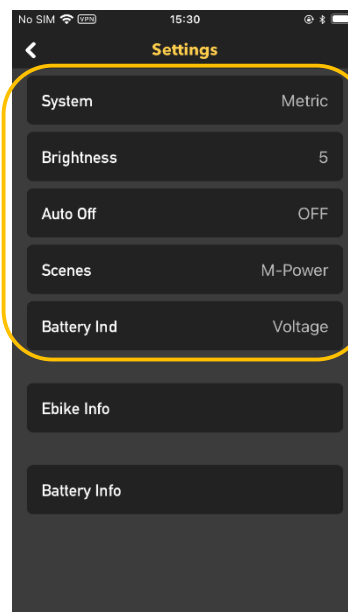


Display's parameters can be set

Settings page


➤ **Navigation**

Click "Navi" to enter the navigation interface of the "I-Bike" APP; After the navigation starts, the Display navigation interface can show the remaining mileage, the riding mileage, the remaining time of riding, navigation instruction and the warning of low battery power at end of endurance

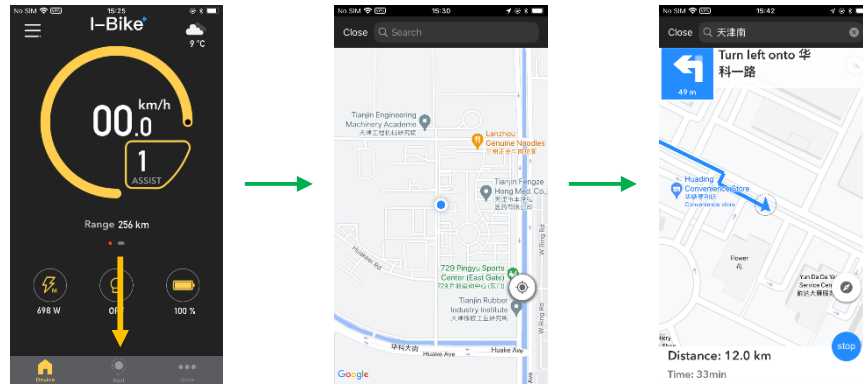

Main interface

Phone's navigation interface

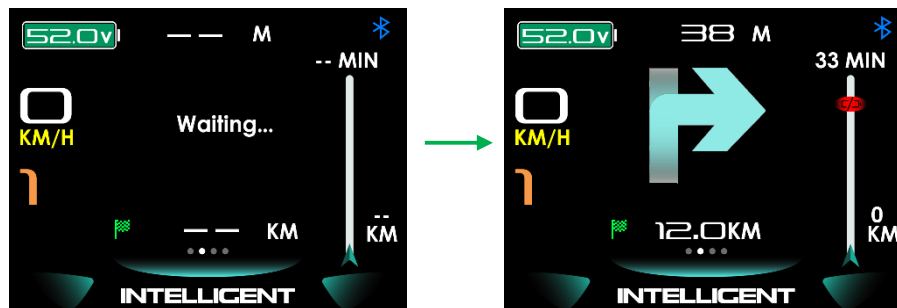

Display's navigation interface

* The version information of the “I-Bike” APP is displayed in “More” on the main interface of the APP.

7.7 Data cleanup

Press and hold **UP** & **DOWN** button together for 1 second can clean temporary data (TRIPB, TIME B, AVG SPD, MAX SPD data).

- * Temporary data is automatically saved when power off. Abnormal power outage will cause data lost.
- * Restore Factory Mode (advanced settings in Menu Page) can clear temporary data (TRIPA TRIPB, TIMEA, TIMEB, AVG SPD, MAX SPD, MENU settings) except ODO.
- * ODO will reset to zero over 99999km. TRIPB will reset to zero over 9999.9km.

8 Menu Page

Double press **MENU** button (press interval less than 0.3 second) can get into setting menus, press **UP/DOWN** button to change the parameter setting, press **MENU** button can get into or save the settings. Select EXIT or press **MENU** button twice to exit from menu.

- * Display will automatically quit menu if there is no operation for 30 seconds.
- * For safety reason, display will be locked on Main Page when riding (speed \geq 2.0km/h), function of MENU will be deactivated.
- * Display didn't save setting until click MENU to confirm.

* Display doesn't quit parameter adjustment interface through pressing **MENU** button.


8.1 Display settings

Display settings include several items: Language, System, Brightness, Auto off, Scenes, Clock, Focus.




8.1.1 Language

6 languages are supported: Czech, German, French, English, Italian, Spanish. Default is English. Select language then click "Back" to confirm.

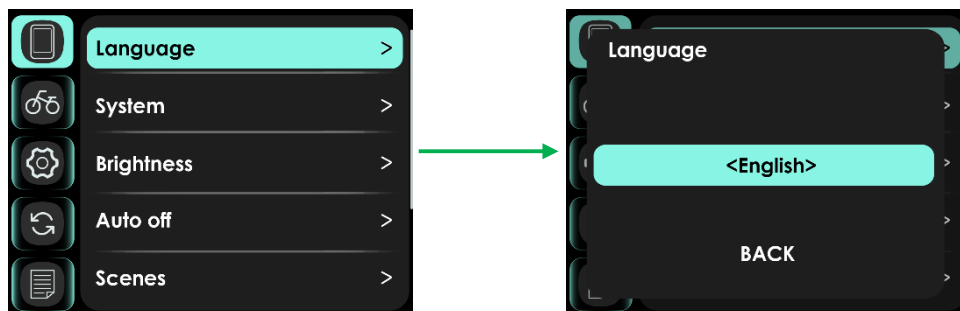


8.1.2 System

Select Metric or Imperial.

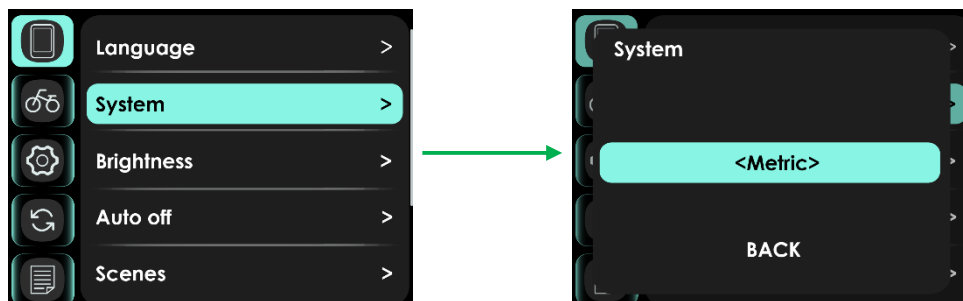


8.1.3 Brightness

You can set the backlight brightness in the light on and off state, press **UP/DOWN** button to change brightness of backlight, 1 is darkness, 5 is brightness.

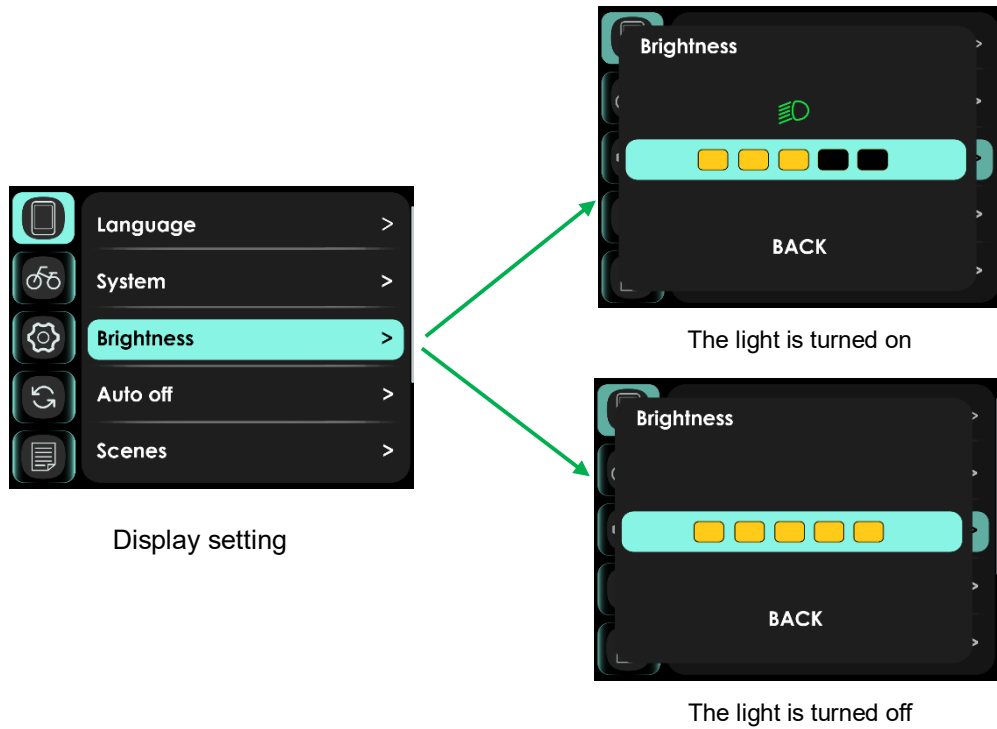


8.1.4 Auto off

This item enables to set the automatic shutdown time of the display, from 1 to 10min. Default value is 5 minutes, represents display shut down when there was no operation and riding for 5 minutes. OFF indicates that the display disables automatic shutdown.

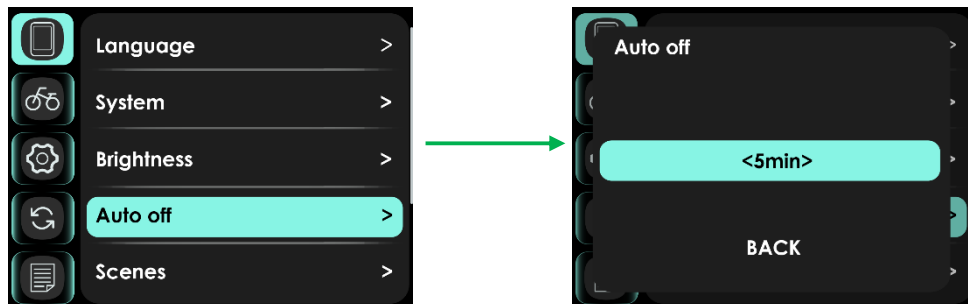


8.1.5 Scenes

Select Modern or Classics.

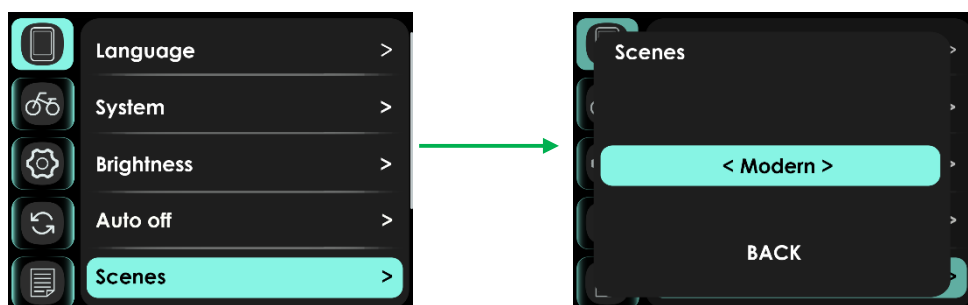

8.1.6 Clock

This item can set date and time. You can choose Show-12 hour, Show-24 hour on Main Page.

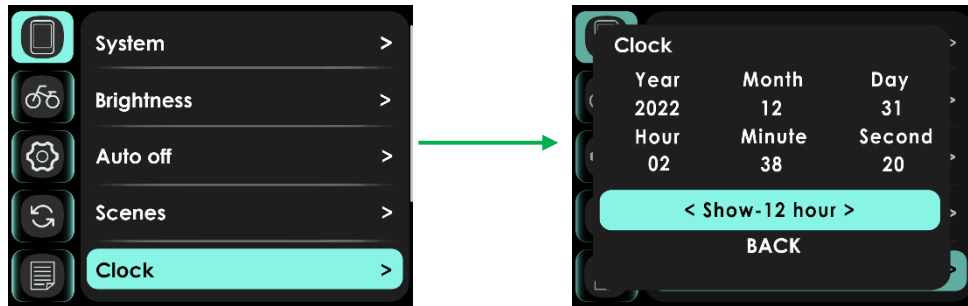

Show-12 hour




Show-24 hour



* Note: When display was powered off, internal Button Battery can keep clock running. When display is power on, Button Battery will be charged by external battery. If the display is not turned on for a long time, the Button Battery will drain (in winter or during long-distance transportation), Clock may slow or stop, please charge the battery as follows:

Set "Automatic shutdown" to "OFF" (Disable power off automatically), keep the display power on for 72 hours. Full charged Button Battery can keep clock running at least 3 months without charged.

8.1.7 Focus

6 Settings are supported: ODO, Trip A, Time A, Trip B, Time B and Range. The Settings are displayed on the Basic information screen and the Main screen.


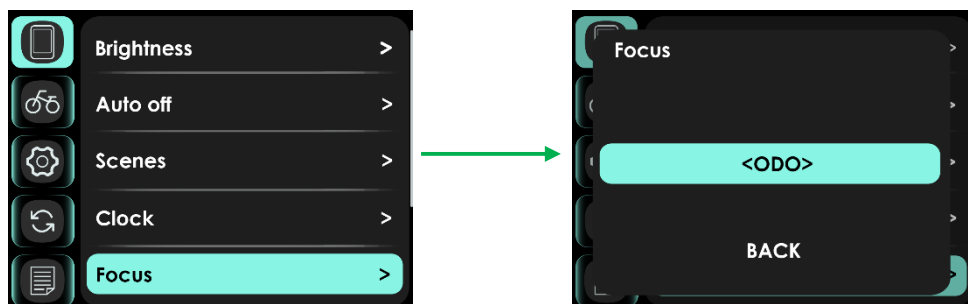


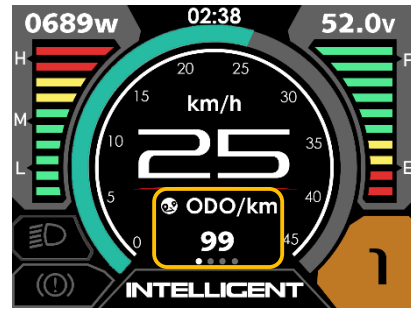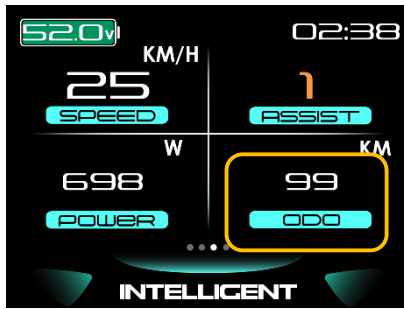

NOTE: Display of Range information requires controller and battery support.

8.2 E-bike Settings


E-bike settings include several items: Start password, Assist levels, Wheelsize, Battery voltage, Battery Indexes, Pow Indexes, Pow range.

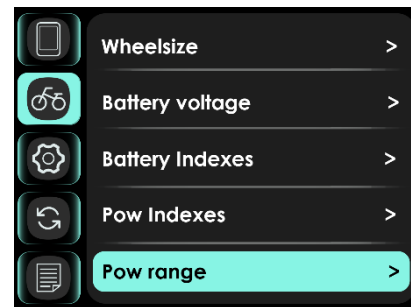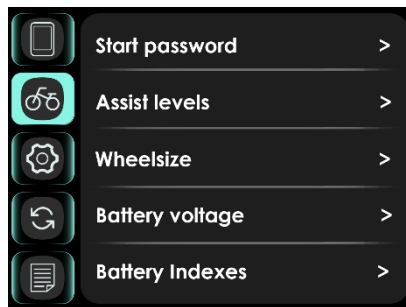


8.2.1 Start password

The start password includes two parameter settings, Start password, OFF/ON.

If you had set start password ON, you must input right password before power on.

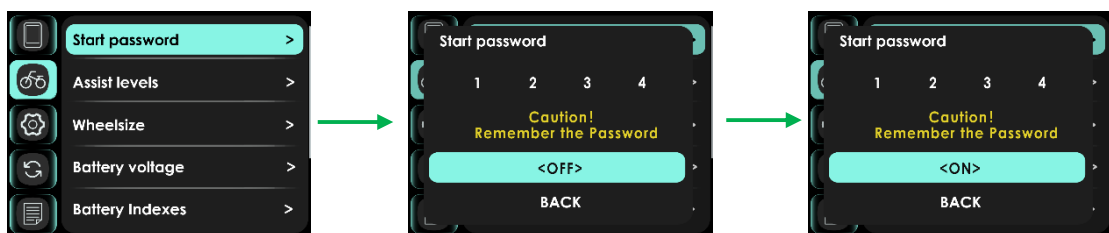


Turn on the start password function

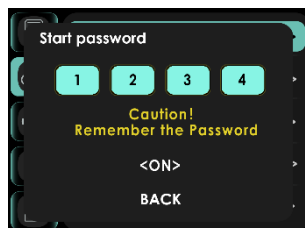

Start password setting page

You need to input the right password before start with 30 seconds.

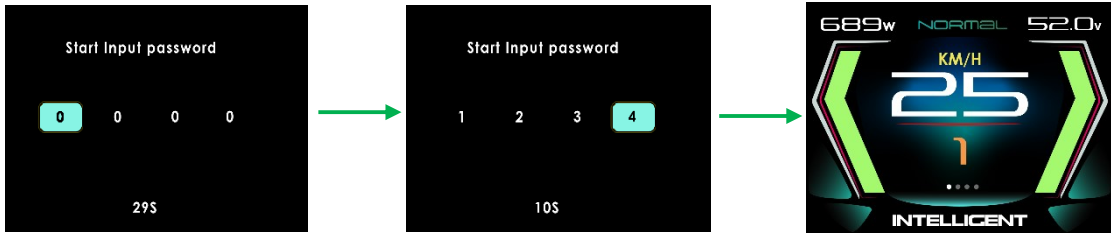


The boot page after setting the start password

* Display will automatically shut down if the correct password is not entered within 30S. Press and hold the **POWER** button to shut down while entering the password.

* Display will automatically shut down if the password was entered incorrectly 3 times.


8.2.2 Assist levels

This item can select assist levels, options are 3/5/9/U.

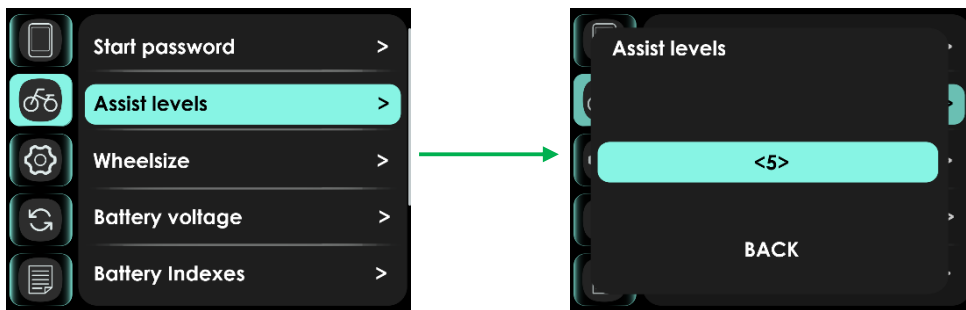


8.2.3 Wheelsize

This item can select wheel diameter, including 0.5~35.0 inch. Incorrect wheel diameter selection can lead to abnormal speeds.

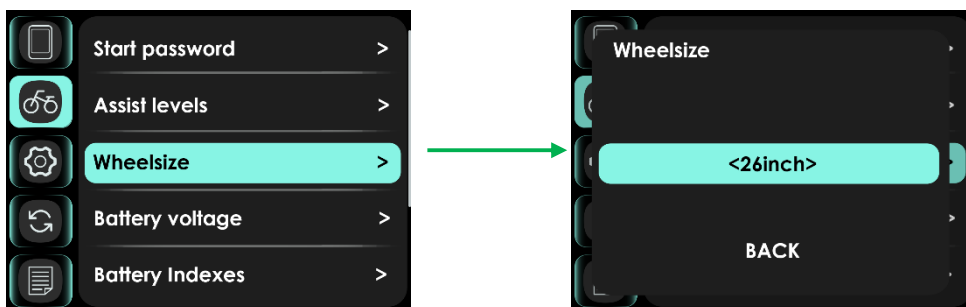


8.2.4 Battery voltage

The following voltage settings are supported: 24V/36V/48V/52V.

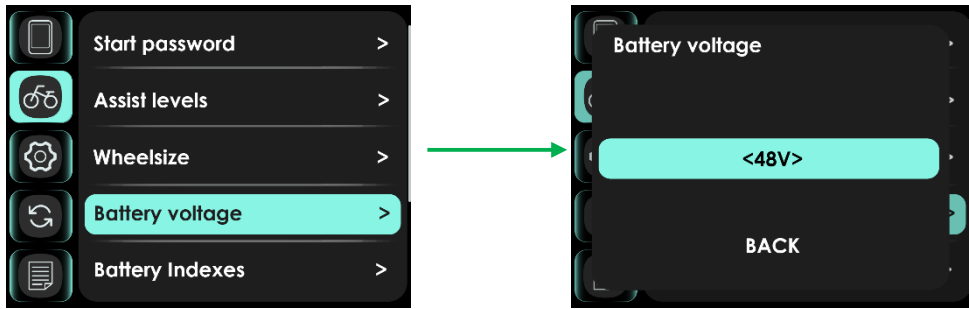

8.2.5 Battery Indexes

This item can select battery Indexes setting, including OFF, Percent, Voltage.

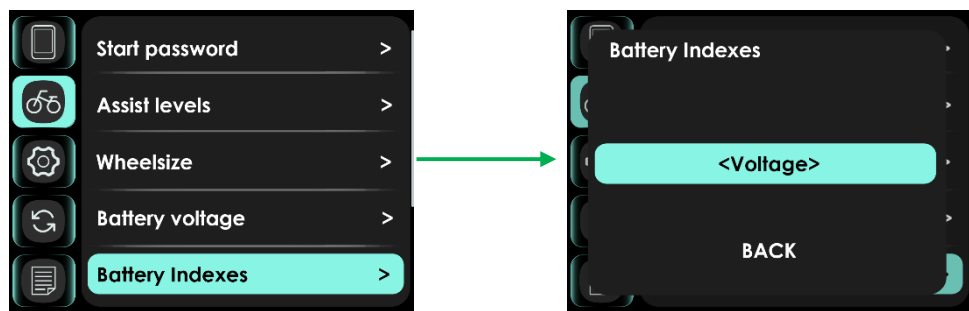

Voltage



Percent





OFF

Note: The voltage is the remaining voltage or percentage of the battery.

8.2.6 Pow Indexes

Main Page can be set to display Power(W) , Current(A), Trip A, Range, Clock.

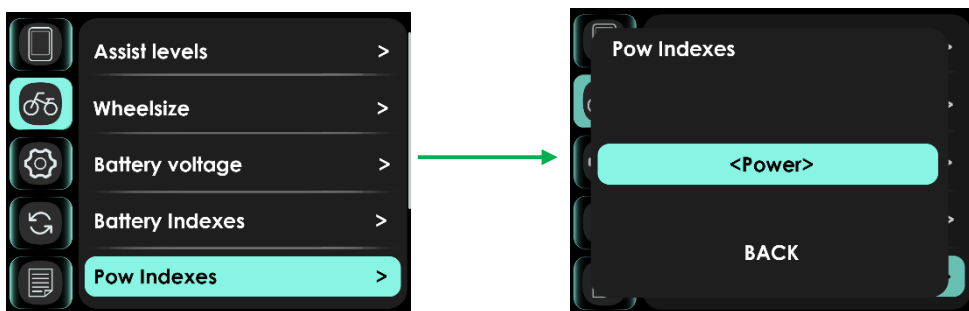


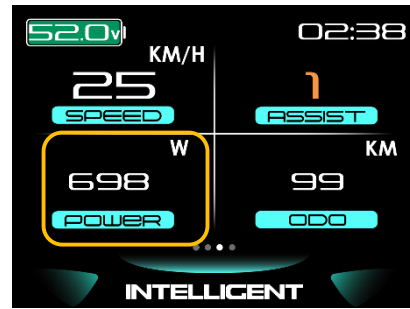

8.2.7 Pow range



Support Output power range Settings:

250W/500W/750W/1000W/1250W/1500W/1750W/2000W.


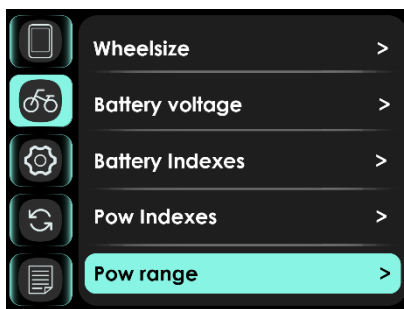


8.3 Advanced setting

Advanced settings have password to prevent illegal modification, default password is '1919', password may be different according to request.

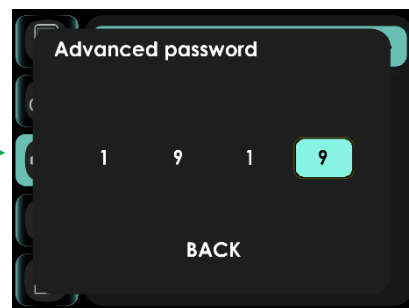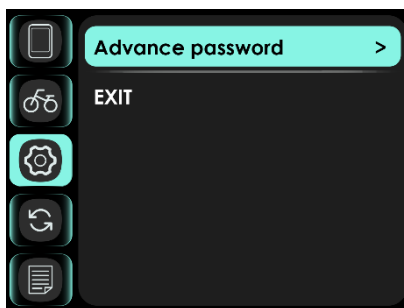


Advanced settings include Speed Limit, Current Limit, Poles In motor, Start after poles, Drive mode, Assist poles, Start strength, Error code.

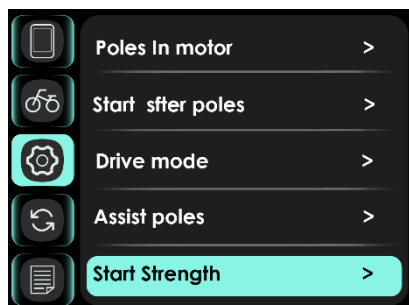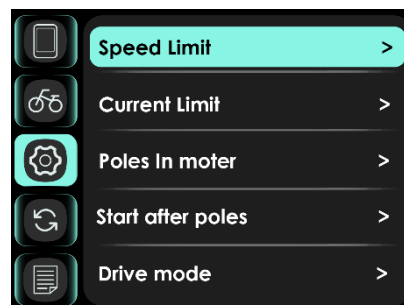

8.3.1 Speed Limit


Select range 10km/h~60km/h, 99 km/h(6.2Mile/h~37.2Mile/h, 61.4 Mile/h).

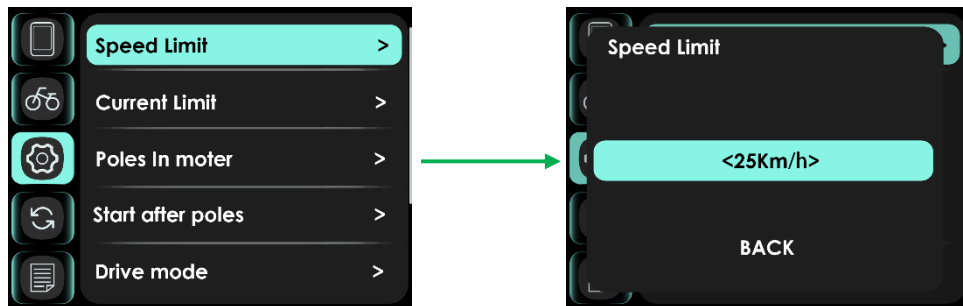

*The maximum speed is restrict by the motor and controller, probably couldn't reach the setting value.


8.3.2 Current Limit

Select range 0~50A.

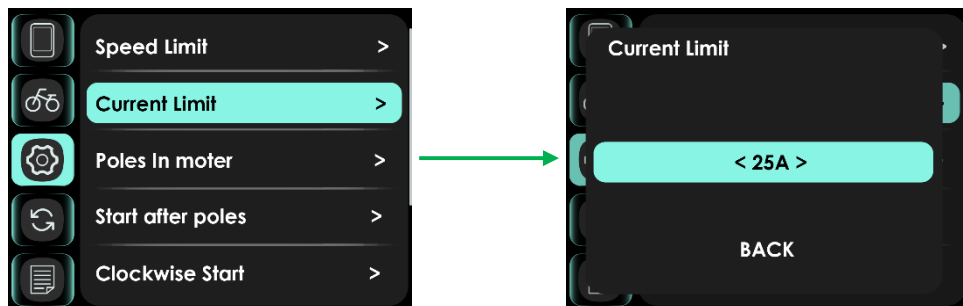


8.3.3 Poles In motor

Magnetic poles inside the motor, select range 1~15.

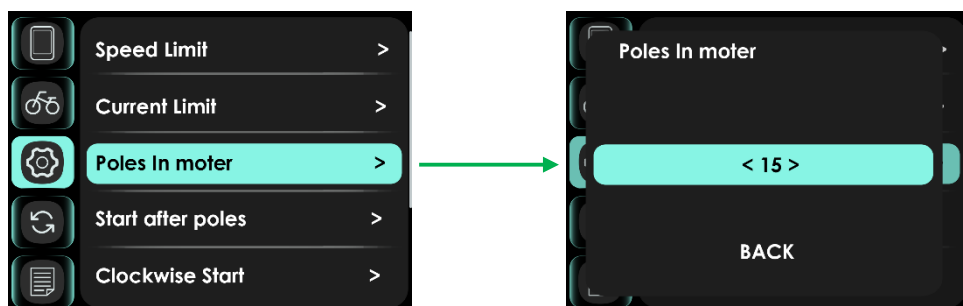


8.3.4 Start after poles

How many poles (speed sensor) need to be detected by controller before starting motor, select range 3~24.

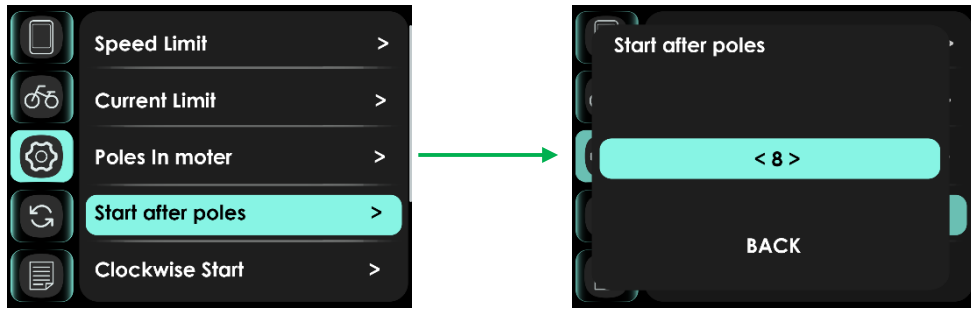


8.3.5 Drive mode

Three drive modes are supported : Assist drive/Throttle drive/Assist drive and Throttle drive (the throttle drive is invalid under zero starting state).

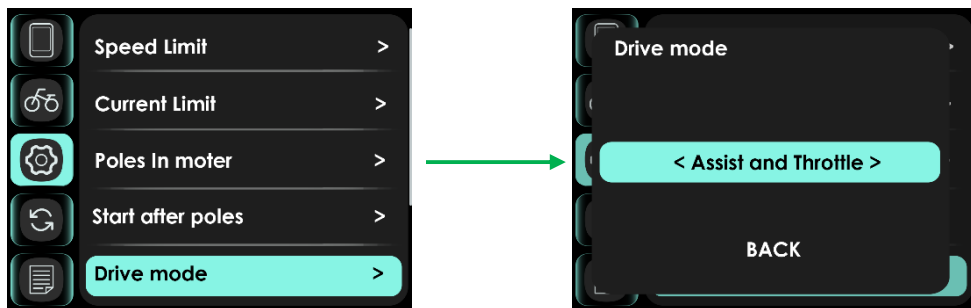


8.3.6 Assist poles

Support 5/8/12.

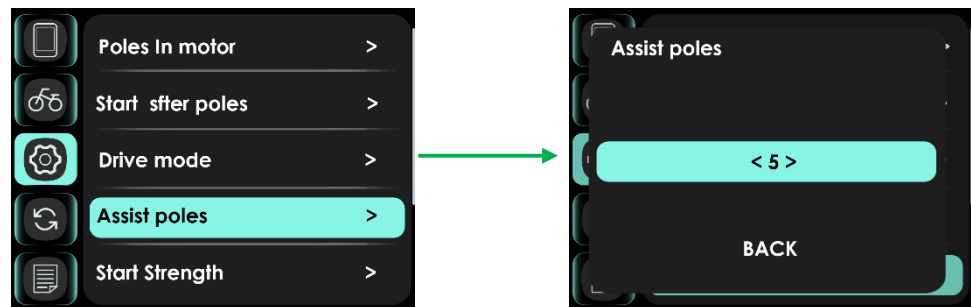

8.3.7 Start strength

Represent the relative strength of the controller output PWM signal during power start. The value can be set from 0 to 5, 0 is the weakest, 5 is the strongest.

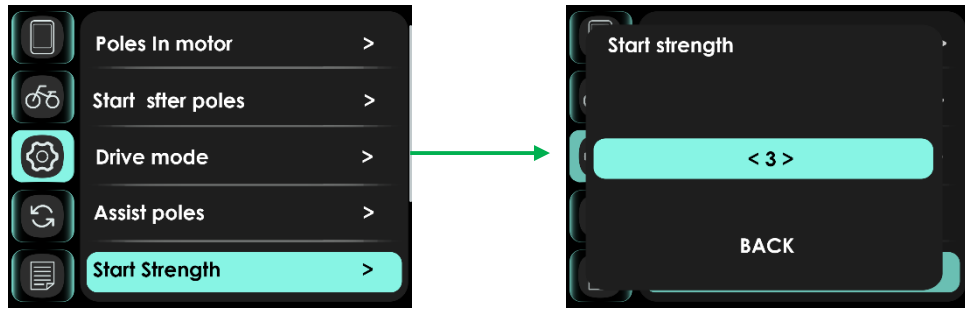


8.3.8 Error code

You can see the error code messages of the last 10 times.



8.4 Factory Setting

Select 'YES' will restore all setting to factory defaults.

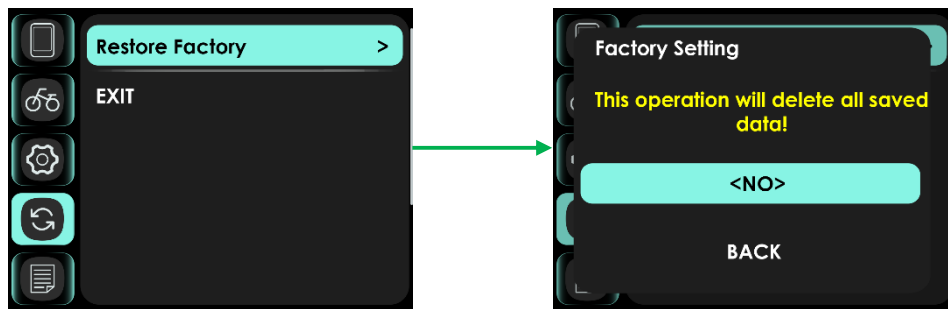

Note: ODO and CLOCK data are not cleared.

8.5 Information

The information display interface includes: Speed and Mileage Information, Product Information, Battery Information.



NOTE: Display of Range information requires controller and battery support.

8.5.1 Product Infor

Product Information show Hardware Version, Software Version, Date...




8.5.2 Battery Infor

Battery Voltage Information can be showed.



*The battery information is displayed when the E-bike is equipped with a battery with communication function.

9 Errors code

Display shows error code and  at the bottom of the screen when system checked abnormal.




Error code prompt page

Error Code	Error description	Handle
01	three-phase power error	Check three-phase power line connection
08	Battery low	Charge the battery
10	Controller protection	Check three-phase power line
30-31	Communication Error	Check the cable connection
40	Hall error	Check the hall sensor's connection

10 Assembly instructions


Please pay attention to the torque value, exceeding the maximum torque can damage the part.

Electrical or pneumatic tools is not recommended.

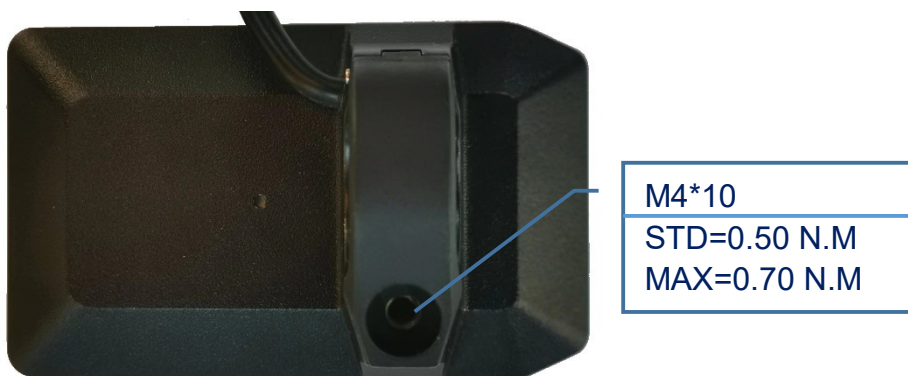

11 Install and use precautions

Do not adjust viewing angle before loose the screws.

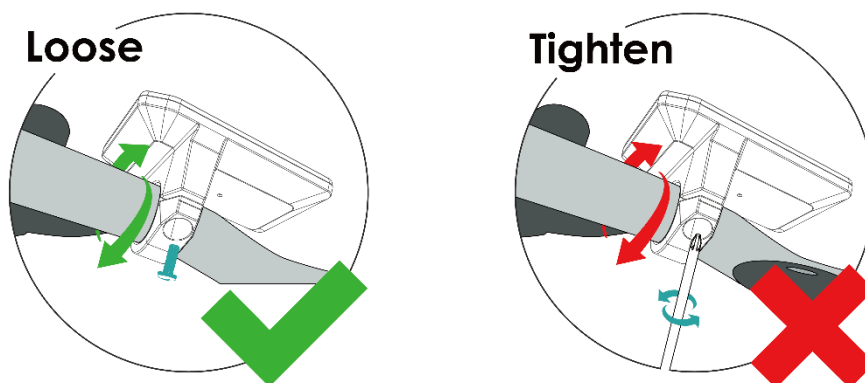

12 Copyright Notice

Questions about your e-bike, please contact with dealer first.

BUYTRICYCLE reserves the right to modify this specification file, without declaration in advance. Content and Image owner: BUYTRICYCLE, Poorhole Ln, Broadstairs, Kent, CT10 2PT

website : www.buytricycle.com